

CK4W

cleankeys®



FEATURES

- Wireless keyboard with complete flat Gorilla® glass surface
- Excellent hygienic level, because it's washable and disinfectable
- Full key layout with integrated Touchpad
- 2.4 GHz wireless connection
- A LED indicator shows when the keyboard needs cleaning
- Volume and sensitivity are adjustable individually
- Key lock to disable the keyboard before cleaning
- Various designs are possible
- Rearside VESA mounting option
- Multi country AC adapter

TECHNICAL DATA

Housing type:	desktop keyboard	Operating temperature:	0 °C to +45 °C
Switch technology:	capacitive	Storage temperature:	-10 °C to +45 °C
Number of keys:	103	Enclosure material:	plastic
Interface:	USB (USB Dongle, 2.4 GHz)	Surface:	0.8 mm glass
Cursor control:	touchpad	Keyboard dimensions:	470 x 167 x 25.4 mm
Protection level:	IP65	Special keys:	Keylock, Sensitivity, Volume
Impact protection rate:	IK10	Certifications:	CE, FCC Part 15 Subpart B
Operating force:	0 N	System requirements:	Win®, MacOS® and Linux® *

ORDER INFORMATION


Cat.No.	Product description	Interface	Layout
KR24230	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-DE	USB	German
KR24231	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-US/EU	USB	US/EU English
KR25207	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-CH	USB	Switzerland
KR25205	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-FR	USB	French
KR25208	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-IT	USB	Italian
KR25206	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-SKAN	USB	Scandinavian
KR25211	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-UK	USB	UK
KR25210	TKR-103-TOUCH-RF-KGEH-VESA-WHITE-USB-US/ARAB	USB	US/Arab

Other language versions available on request.

* if OS and Hardware meet the requirements of USB2.0 compliance

Subject to modifications and errors

DIMENSIONAL DRAWING (in mm)

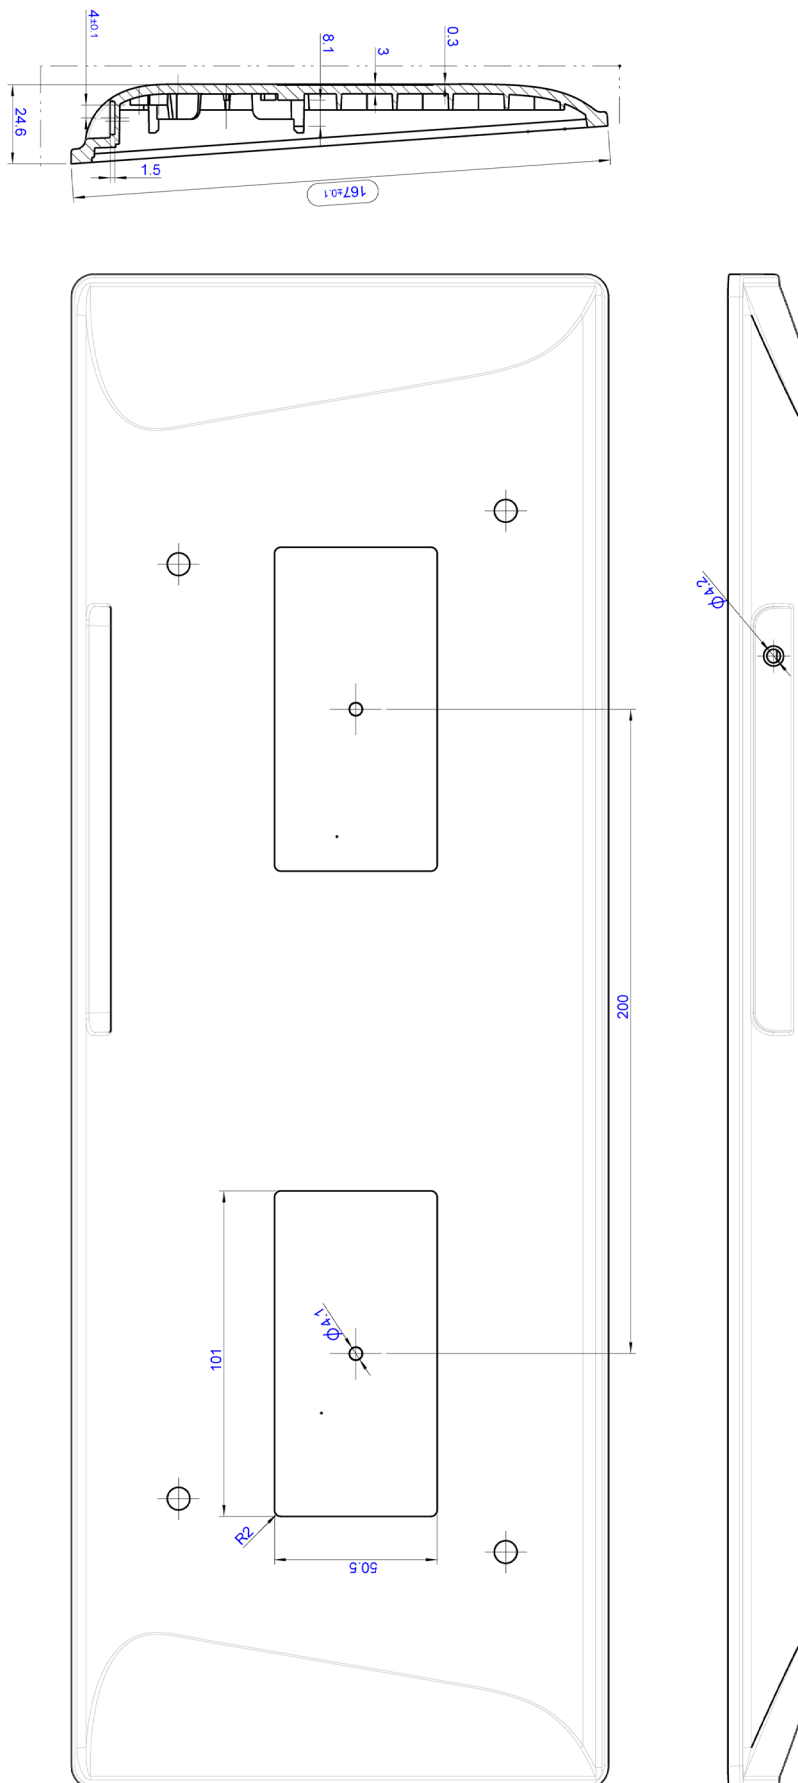

Subject to modifications and errors

GETT Gerätetechnik GmbH

Mittlerer Ring 1 | 08233 Treuen | Germany
 Tel: +49 37468 660-0
 Fax: +49 37468 660-66
 E-Mail: info@gett.de
 Internet: www.gett.de

Gett North America LLC


E-Mail: info@gett-na.com
 Internet: www.gett-na.com

Gett Asia Ltd.

E-Mail: info@gett-asia.com
 Internet: www.gett-asia.com


gett-group.com
washable-keyboards.com

KEY FUNCTIONS:

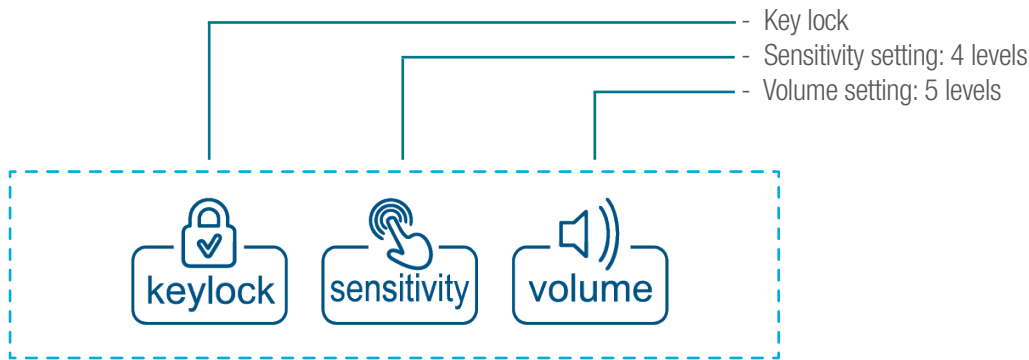


- - - - 8 LED chain to display the key lock and the settings for sensitivity and volume

The sensitivity can be set as follows (ascending):

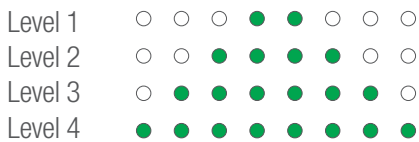

The volume can be set as follows (ascending):

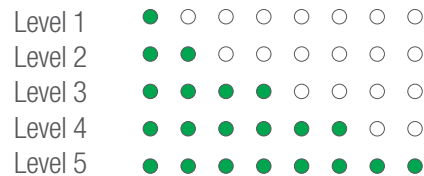

KEY LOCK FUNCTION

Press the key for approx. 2 seconds. This will cause the status display to flash; when it is permanently green, the keys are locked. To unlock the system, press the key for 2 seconds again and wait until the status LED goes off. The keys are then ready for use again.

CLEANING

You can clean the glass surface with normal cleaning and disinfecting agents. The chemical resistance of the glass surface may vary depending on the concentration of the solution and the particular environmental conditions. We therefore recommend that you carefully check your cleaning and disinfecting agents to see how they affect glass surfaces.

INDIVIDUAL MODIFICATIONS

- Adding a Logo/Brand (1-4 colours)
- New country layout
- Individual GUI design
- Reducing the keyboard cable length
- Changing of the keytable (HID-Standard)